




# Sony Cyber-shot DSC-WX100 Flash Bulb Replacement

Replacing the flash bulb on the DSC-WX100.

Written By: Matthew

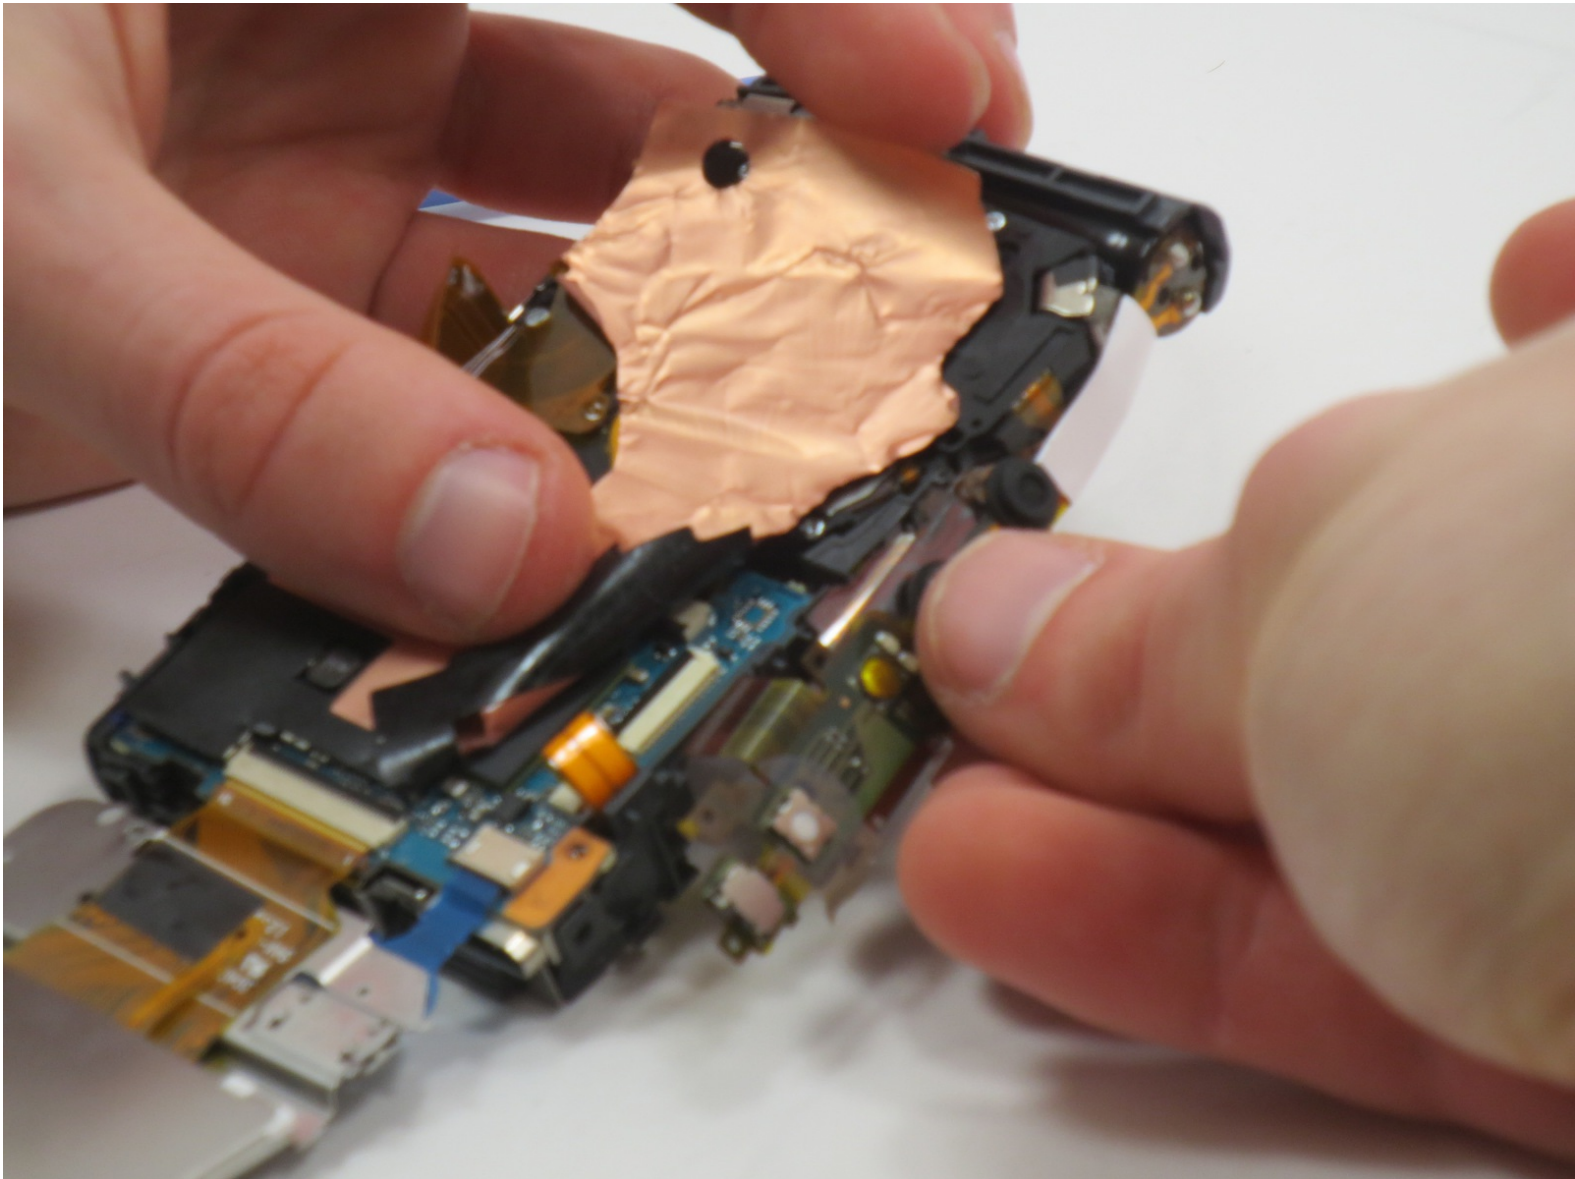



## TOOLS:

- [Solder](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Open the flap indicated to allow access to the battery slot.
- ⓘ The gray switch indicated has to be moved to the right in order to release the flap.

## Step 2



- ⓘ If the old battery is still in the slot, then make sure the camera is turned off prior to removal.
- If there is a battery currently in the slot, remove by first pulling downwards on the blue component. This will allow you to remove the battery from the slot.




### Step 3 — Outer Casing





- Remove all of the 1mm screws using a Philips #000 Screwdriver.
- Remove the rest of the screws (2mm) from the camera covers using a Phillips #000 Screwdriver.

### Step 4

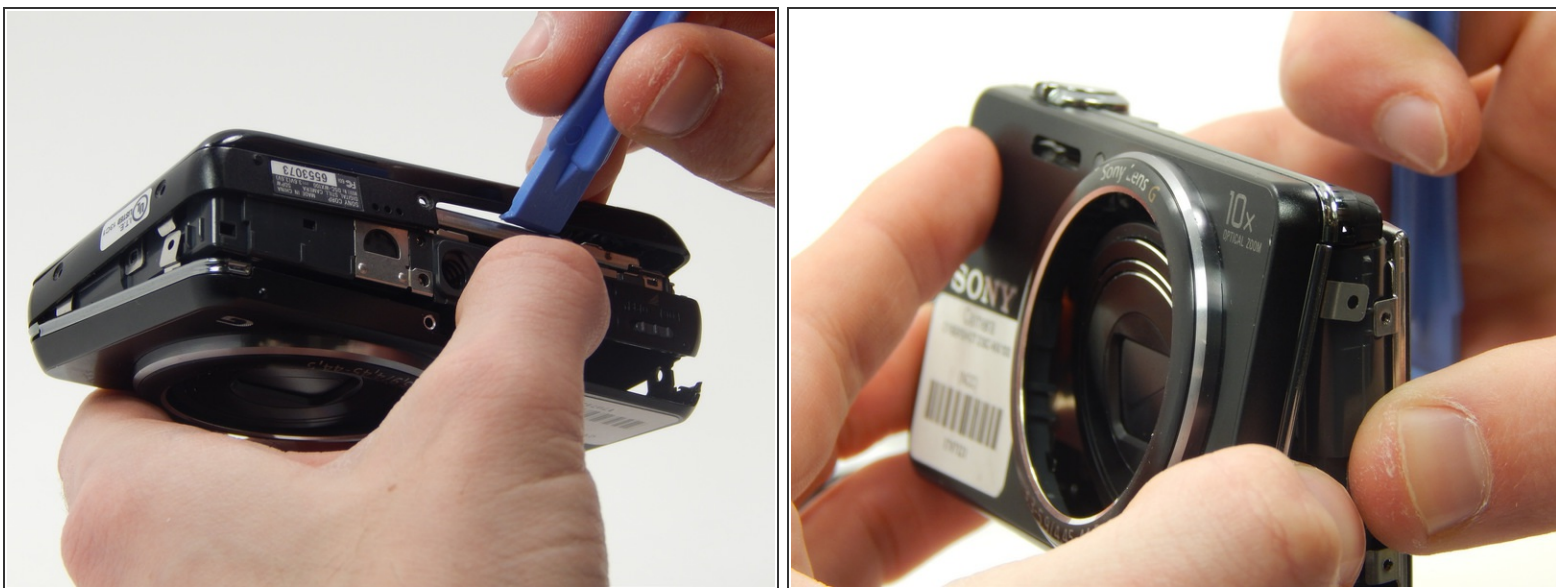


- Use the plastic opening tool to gently remove the front and back plates of the camera.


## Step 5

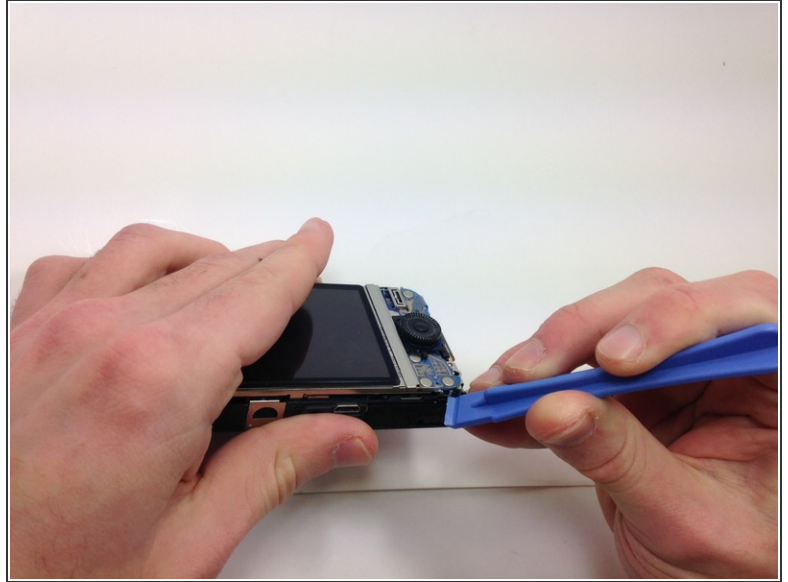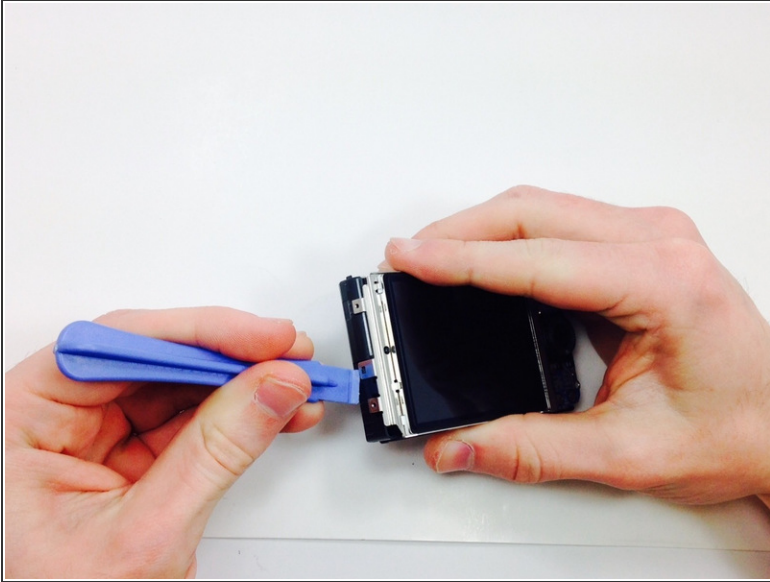


- Use a plastic opening tool to gently release the two indicated tabs.

## Step 6 — Flash Bulb

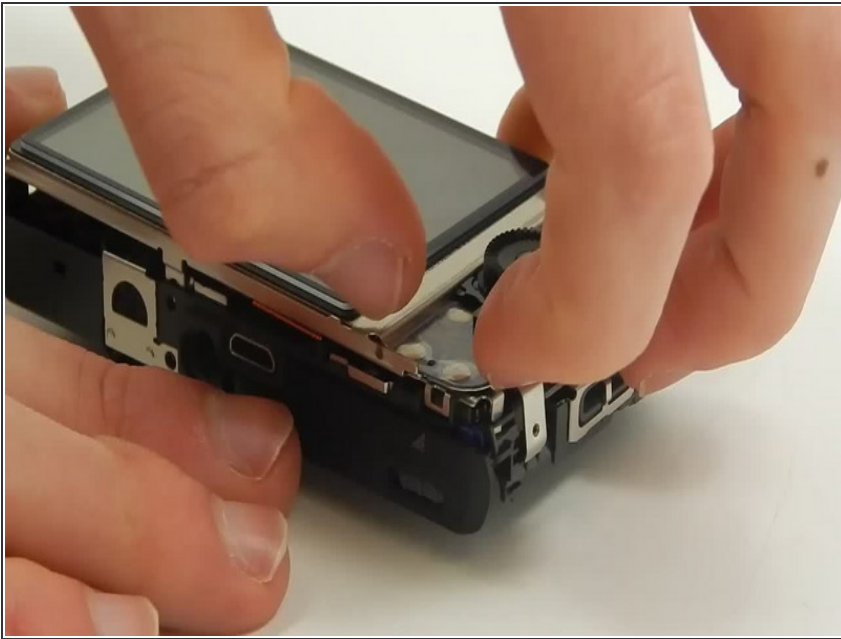


- Pull up on the lower end of the plate. Lift so the plate is high enough that the marked bump is not holding it in place.
  - Pull away from the camera at the end of the metal plate with the blue circuits to then remove the plate from the rest of the camera.
-  For help with this step, refer to the video.

## Step 7

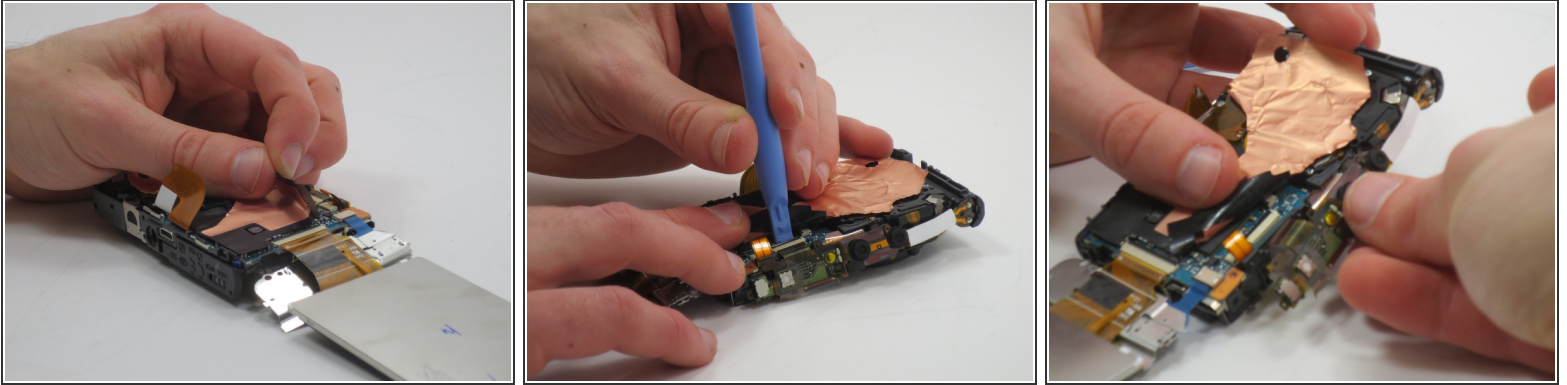

- Peel back the copper cover and black tape from the motherboard to reveal the connection port.
- Using the plastic opening tool, release the black bar on the connection port so that the bar is vertical.
- Pull the tab out.


## Step 8

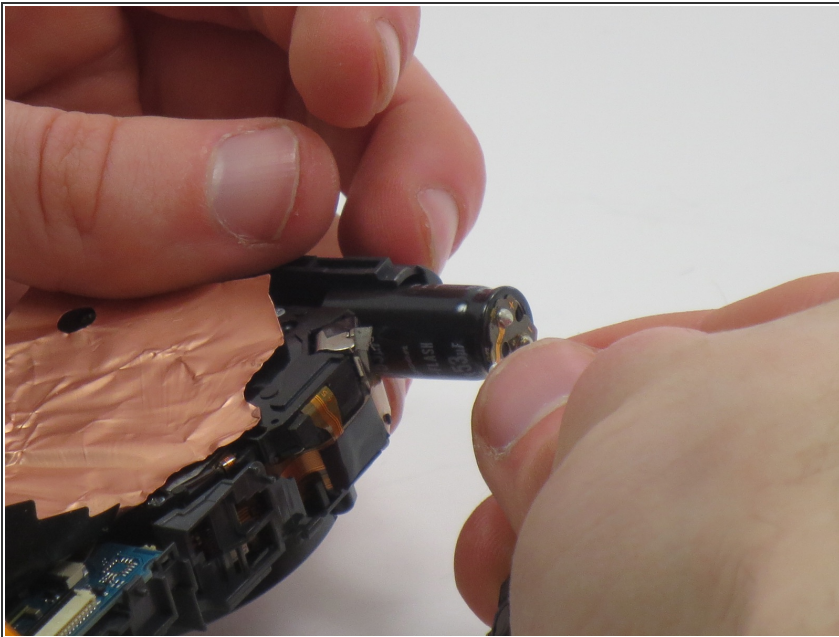

- Pull back on the case, then pull the entire tab out from the case.



## Step 9

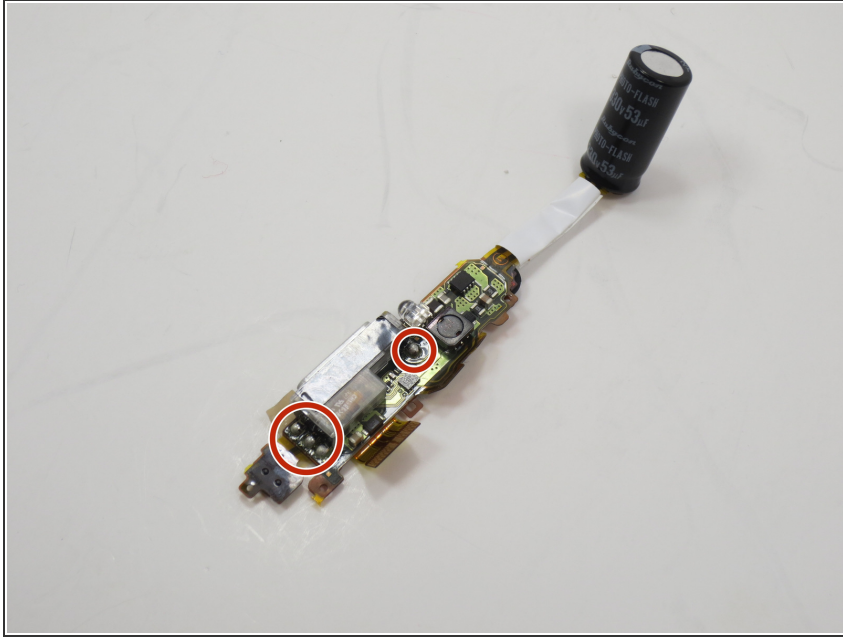

- Solder the 4 marked nodes and the remove the flash bulb from the sheet.
- ⓘ For help on soldering, refer to this [Guide](#).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:42:04 PM.